


BELTON B-20N ASSEMBLY AND PARTS LIST

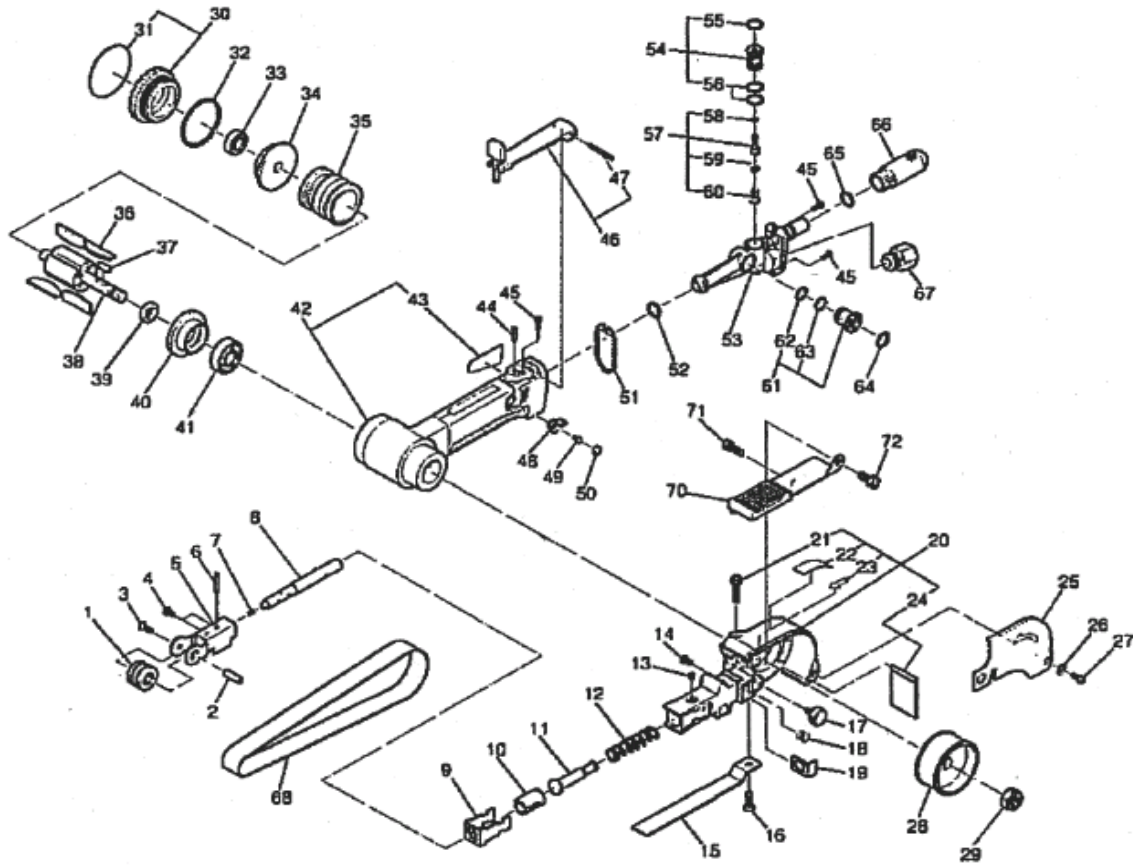

The part numbers with () are included in the Ass'y parts written above them.

No.	Part No.	Part Name	Q'ty
1	TA99885	Idle Pulley A Ass'y	1set
2	TQ11616	Idle Pulley Shaft	1
3	TP16219	Hex.Countersunk Head Screw 4x10	1
4	TQ11400	Hex.Socket Button Head Screw 4x8	2
5	TB07747	Bracket Sub Ass'y A	1set
6	TP03544	Spring Pin 6x16 AW	1
7	TQ10526	Tension Bar Spring	1
8	TB07777	Tension Bar Shaft Ass'y	1set
9	TQ11610	Stopper	1
10	TQ11609	Guard Insert	1
11	TQ11620	Push Rod	1
12	TQ11621	Spring 1.6x11x45	1
13	TP15643	Hex.Socket Set Screw 4x4 with Flat Point	1
14	TQ11659	Hex.Socket Button Head Screw 3x6	1
15	TQ11611	Shoe	1
16	TQ11660	Pan Head Screw 5x6	1
17	TQ10712	Decorative Screw	1
18	TQ07218	Spring 0.35x7.5x7	1
19	TQ11622	Push Button	1
20	TB08068	Guard Sub Ass'y B	1set
21	(TP04532)	Hex.Socket Head Cap Screw 5x30	1
22	(TP16361)	Label Caution	1
23	(TP16360)	Label Rotation	1
24	(TP16207)	Dust Cover	1
25	TQ11618	Belt Cover	1
26	TP00144	Washer M4	1
27	TP12819	Pan Head Screw 4x6	1
28	TQ11617	Drive Pulley	1
29	TP01918	Hex.Nut M10	1
30	TB07958	Cap Ass'y	1set
31	(TQ11824)	Label Model B-20N	1
32	(CQ04413)	O-ring S-38	1
33	TP00468	Ball Bearing 608ZZ	1
34	TP01907	End Plate A	1
35	TP10000	Cylinder	1
36	TA9A212	Blade Ass'y (4pcs./set)	1set
37	TP00502	Parallel Key Both Ends Round 4x4x9.5	1
38	TP01909	Rotor	1
39	TP01912	Spacer	1
40	TP01911	End Plate B	1
41	TP01913	Ball Bearing 6000ZZ	1

No.	Part No.	Part Name	Q'ty
42	TB07957	Housing Sub Ass'y	1set
43	(TQ11822)	Label Warning	1
44	TQ11559	Parallel Pin 3x14	1
45	TQ11560	Tapping Screw 3x8	3
46	TB07709	Lever Ass'y	1set
47	(TP00460)	Spring Pin 3x22AW	1
48	TQ11554	Adjust Lever	1
49	TP08598	Pan Head Screw 3x5	1
50	TQ11626	Lever Cap	1
51	TQ11555	Packing	1
52	CQ14480	O-ring JASO-1010	1
53	TQ11551	Air Inlet	1
54	TB07938	Throttle Valve Ass'y	1set
55	(TP14604)	O-ring S-10	1
56	(TP12569)	O-ring S-11.2	2
57	TB07708	Valve Stem Ass'y	1set
58	(TQ10395)	O-ring SS-2.5	1
59	(TP11994)	O-ring P-4	1
60	(TP03769)	Valve Spring	1
61	TB07937	Adjust Valve Ass'y	1set
62	(CQ25954)	O-ring AS568-012	1
63	(CQ05860)	O-ring AS568-013	1
64	(CP24969)	O-ring JASO-1011	1
65	TP07031	O-ring S-8	1
66	TQ11558	Silencer	1
67	TP00857	Bushing M16xPT1/4	1

Standard Accessories

No.	Part No.	Part Name	Q'ty
68	TA99606	Abrasive Belt Z75 #60 x 20	2
	TA99607	Abrasive Belt Z75 #80 x 20	1
	TA99608	Abrasive Belt Z75 #100 x 20	1
	TA99609	Abrasive Belt Z75 #120 x 20	1
	TB07908	Finger Pad Sub Ass'y	1set
	TP00051	Pan Head Screw 5 x 10	1
	TP02419	Pan Head Screw 6 x 10	1
	TP04305	Hex.Socket Screw Key 2.5	1
	TP01939	Hex.Socket Screw Key 4	1
	TQ11686	Convex Shoe	1
	TP02236	Bushing PT1/4 x NPT1/4	1
	TQ11700	Instruction Manual	1