

9 Exploded View/Parts List


MYS-20 Exploded View/Parts List

⚠ CAUTION

- Users should never perform disassembly of the tool.

This illustration is for reference only.

For repair or replacement of the tool, request service from the retailer where you purchased the tool or the nearest NITTO service member store.

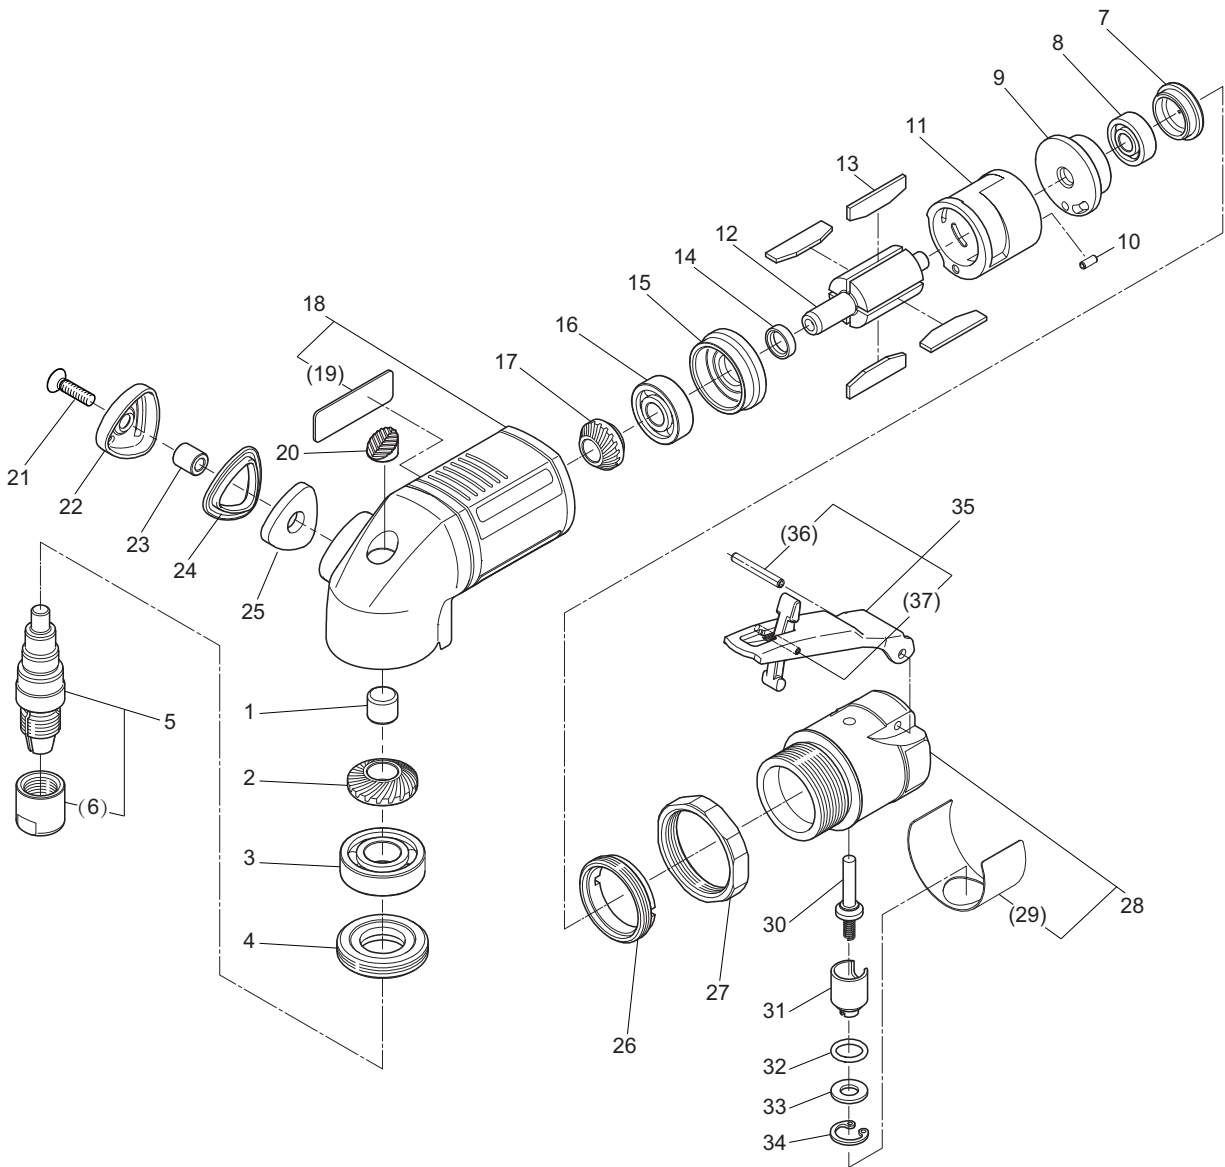

*1 indicates a consumable item, *2 indicates a commercial item. Parts inside () are components of the above assembly.

No.	Part no.	Part name	Quantity
*1 *2	1	TQ12638 Needle Bearing BK0609T2	1
*1	2	TQ12986 Gear 1×22	1
*1 *2	3	TP00498 Ball Bearing 6001ZZ	1
	4	TB08597 Bearing Set Screw Ass'y	1 set
	5	TB09845 Spindle Sub Ass'y	1 set
	(6)	(TP10742) Chuck Nut	1
	7	TP10110 Cap	1

No.	Part no.	Part name	Quantity	
*1 *2	8	TP03933	Ball Bearing 606ZZ	1
	9	TP10109	End Plate A	1
	10	TP00496	Spring Pin 2.5×6 AW	1
	11	TP14222	Cylinder	1
	12	TP14224	Rotor	1
*1	13	TB08602	Blade Ass'y (4 pcs.)	1 set
	14	TP06322	Spacer 8×11×3	1
	15	TQ12622	End Plate B	1
*1 *2	16	TP00468	Ball Bearing 608ZZ	1
*1	17	TQ12985	Pinion 1×15	1
	18	TB10384	Housing Ass'y	1 set
	(19)	(TQ15260)	Label Warning	1
	20	TQ15004	Plug 20	1
	21	TQ14950	+ Countersunk Head Screw 4×16	1
	22	TQ14889	Exhaust Cover	1
	23	TQ14949	Spacer	1
	24	TQ14891	Packing Cover	1
*1	25	TQ15131	Exhaust Filter	1
	26	TP10098	Lock Nut	1
	27	TP03468	Lock Ring	1
	28	TB10405	Valve Body Sub Ass'y	1 set
	(29)	(TQ15282)	Label Specification	1
	30	TA93070	Valve Stem Ass'y	1 set
	31	TP06325	Adjust Valve	1
	32	TP11997	O-Ring KS-7	1
	33	TP06326	Spacer 6×12×1.2	1
	34	TP03695	Internal Retaining Ring C-12	1
	35	TB01152	Lever Ass'y	1
	(36)	(TP00460)	Spring Pin 3×22 AW	1
	(37)	(TP05498)	Spring Pin 2×16 AW	1

Accessories

No.	Part no.	Part name	Quantity
	TP02236	Bushing R 1/4 × NPT 1/4	1
	TP00475	Spanner 14	2
	TQ15284	Instruction Manual	1