


11 ATRA ACE WA-5000 ASSEMBLY

⚠ WARNING

The illustration is for information only. Users should never disassemble parts. Contact the sales agent from whom you purchased the tool or an authorized dealer should the tool need service, repair or replacement of parts.

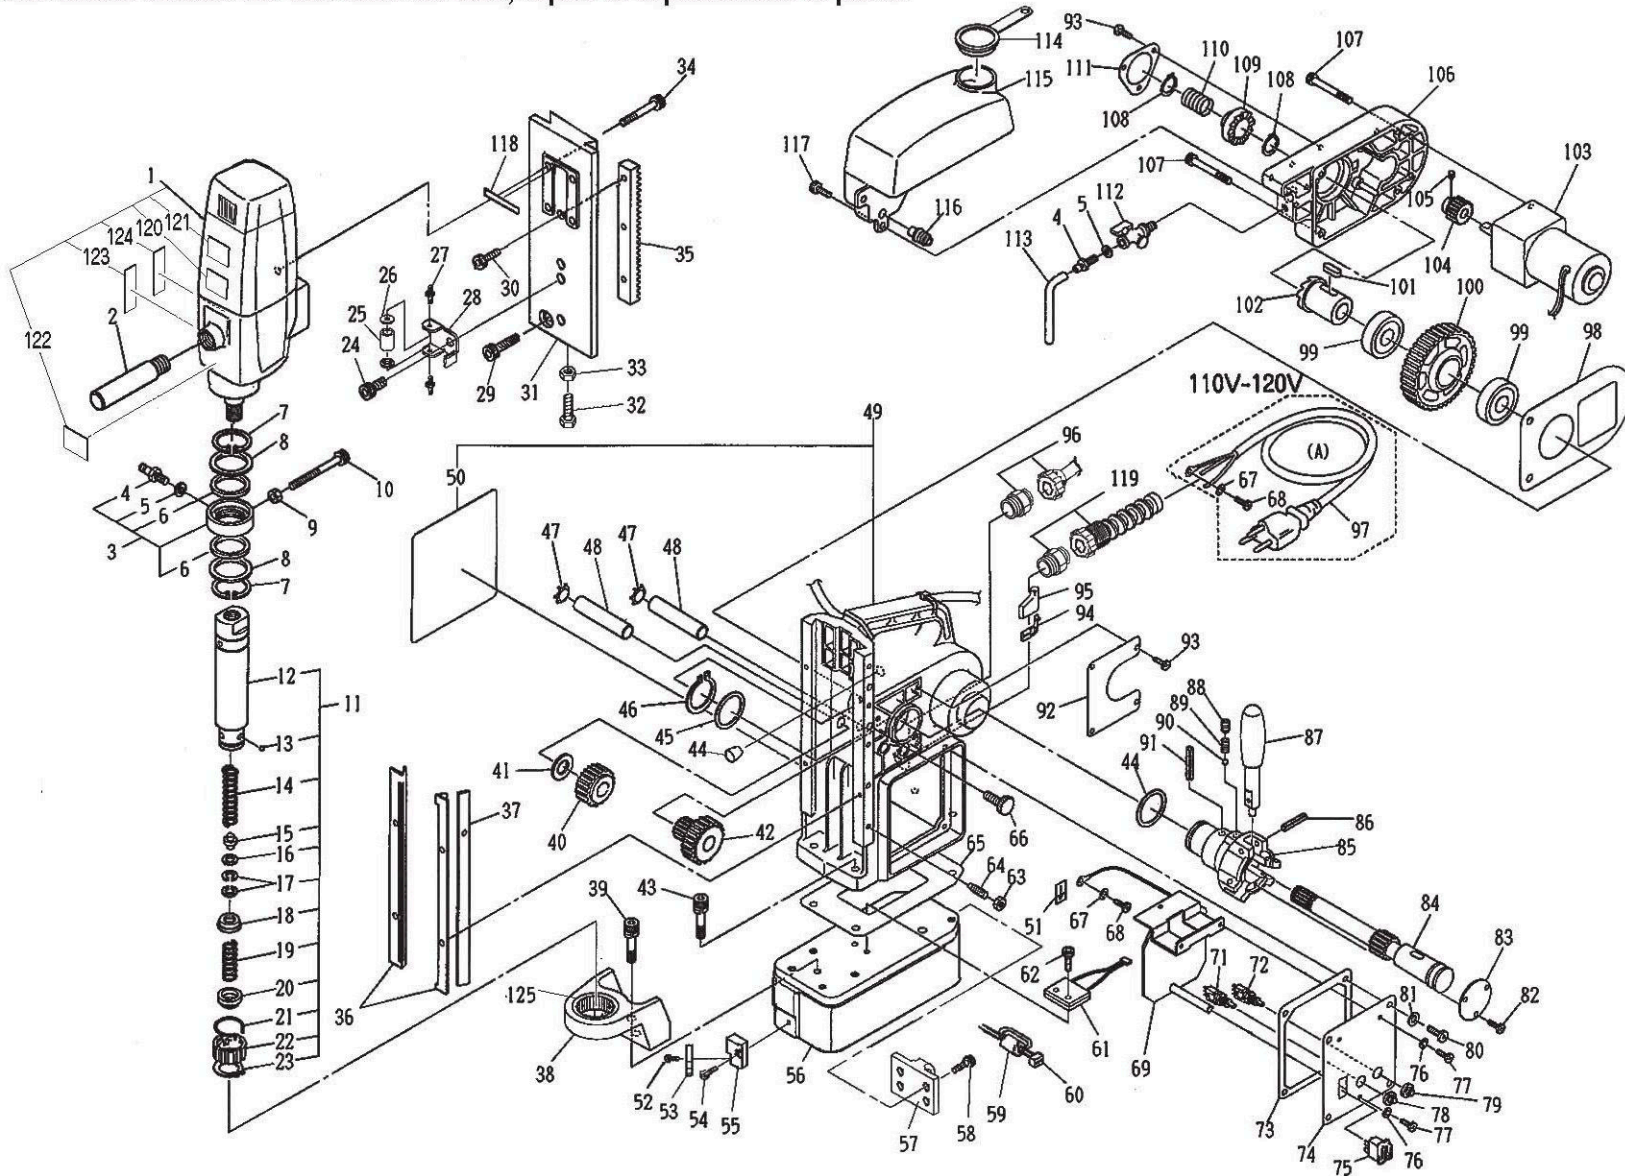

12 ATRA ACE WA-5000 PARTS LIST

The part numbers with () are included in the Ass'y parts written above them.

No.	Part No.	Part Name	Q'ty	Price
1	TB07169	Drill Motor Ass'y (110V-120V)	1set	
-	(TB05187)	Carbon Brush Ass'y	1set	
120	(TQ11565)	Label Arbor Warning	1	
121	(TQ13281)	Label Shock Warning	1	
122	(TQ10648)	Label Change Caution	1	
123	(TQ13284)	Label Adaptation Cutter Size	1	
124	(TQ10647)	Label Change Operation	1	
2	TB02534	Side Handle Ass'y	1set	
3	TB00496	Oil Ring Sub Ass'y	1set	
4	(TP14500)	Hose Nipple	2	
5	(CP21947)	Packing S-4.7x8x0.8	2	
6	(TP14499)	Oil Seal GD 38x48x4	2	
7	TP14969	External Retaining Ring ISTW-38	2	
8	TP12773	Washer 38.5x54x1	2	
9	LP10496	Hex. Nut M6	1	
10	TP05469	Hex. Socket Head Cap Screw 6x45	1	
11	TB07172	Arbor Body Ass'y	1set	
12	(TQ10650)	Arbor Body	1	
13	(TB01672)	Ball 5/16 Ass'y	1set	
14	(TQ10649)	Spring 1.4x16.2x135	1	
15	(TQ01895)	Pilot Spacer	1	
16	(TP15848)	Spacer 10.5x19x5	1	
17	(TP13905)	Internal Retaining Ring RTW-19	2	
18	(TB01948)	Washer Ass'y	1set	
19	(TQ01898)	Spring 0.8x12x31	1	
20	(TB01349)	Push Ring Ass'y	1set	
21	(TQ01896)	Rotating Spring	1	
22	(TQ01897)	Sleeve	1	
23	(TP15239)	External Retaining Ring C-28	1	
24	TP03247	Hex. Socket Head Cap Screw 10x15	1	
25	TQ00670	Dropper Pipe	1	
26	TQ00671	Dropper Packing	2	
27	TQ00672	Dropper Nipple	2	
28	TQ10785	Dropper Plate	1	
29	TP14174	Hex. Socket Head Cap Screw 10x25	1	
30	TP01945	Hex. Socket Head Cap Screw 5x12	3	
31	TQ10646	Slide Board	1	
32	TQ10849	Hex. Bolt 8x20	1	
33	TP08584	Hex. Nut M8	1	
34	TP04532	Hex. Socket Head Cap Screw 5x30	4	
35	TP12776	Rack	1	
36	TP12777	Slide Plate	2	
37	TQ06773	Gib	1	
38	TB05407	Bracket Ass'y	1set	
125	(TQ03444)	Roller Bearing	1	
39	TQ03346	Hex. Socket Cap Screw 8x30 with Spring Washer	3	
40	TQ11730	Spur Gear 1.5x26	1	
41	TQ06779	Washer 12.2x28x1	1	
42	TQ11729	Spur Gear 1.5x14x29	1	
43	TQ03345	Hex. Socket Head Cap Screw 8x25 with Spring Washer	4	
44	TQ10791	Rubber Stopper	1	

No.	Part No.	Part Name	Q'ty	Price
45	TQ06780	Washer 32.2x42x2	2	
46	TQ06781	External Retaining Ring ISTW-32	1	
47	TQ04715	Internal Retaining Ring CRTW-12	2	
48	TQ06776	Shaft	2	
49	TB08778	Body Sub Ass'y	1set	
50	(TQ11224)	Label Warning	1	
51	(LP13557)	Label Earth	1	
52	TP01945	Hex. Socket Head Cap Screw 5x12	1	
53	TQ10787	Blade	1	
54	TP14178	Hex. Socket Head Cap Screw 6x10	1	
55	TQ10695	Blade Base	1	
56	TB07174	Sqare Pole Ass'y (110V-120V)	1set	
57	TP17985	Chain Guide	1	
58	TP01644	Hex. Socket Head Cap Screw 6x12	4	
59	TQ11011	Hinged-Clamp Core	1	
60	TB00573	D Cord Ass'y	1set	
61	TB01363	Side Slip Detection Function Ass'y	1set	
62	TQ10600	Hex. Socket Head Cap Screw 4x18	2	
63	TP07419	Hex. Nut Type3 M6	5	
64	TQ00730	Hex. Socket Set Screw with Dog Point 6x20	5	
65	TQ06794	Packing Pole	1	
66	TP02931	Set Screw	1	
67	TP04464	Toothed Lock Washer B M4	2	
68	LP08489	Binding Head Screw 4x6	2	
69	TB09056	Control Board Ass'y (110V-120V)	1set	
71	TB07055	Switch SW3 Ass'y	1set	
72	TB07054	Switch SW2 Ass'y	1set	
73	TQ06787	Packing Body	1	
74	TQ11226	Switch Plate	1	
75	TQ07306	Rocker Switch	1	
76	TQ00258	Seal Washer M4	3	
77	TQ01526	Pan Head Screw 4x10	3	
78	TQ10085	Waterproofing Cap Black	1	
79	TQ10467	Waterproofing Cap Red	1	
80	TP02419	Pan Head Screw 6x10	4	
81	TQ01331	Seal Washer M6	4	
82	TP08598	Pan Head Screw 3x5	3	
83	TQ06762	Plate Automatic Feeder	1	
84	TQ06760	Gear Shaft	1	
85	TQ06761	Handle Stem	1	
86	TP12821	Spring Pin 5x26 AW Double	3	
87	TQ00680	Rod Handle	3	
88	TP06397	Hex. Socket Set Screw with Cup Point 6x8	3	
89	TP06396	Spring	3	
90	CP01123	Ball 3/16	3	
91	TQ06759	Spring Pin 8x40 AW	1	
92	TQ10651	Plate Spec. (110V-120V)	1	
93	TP12819	Pan Head Screw 4x6	7	
94	TQ07308	Terminal #250 42232-3	2	
95	TQ07309	Sleeve 170891-1	2	
96	TQ07097	Cable Connector 3217	1	
97	TB05877	Cable Cord Ass'y (A) (110V-120V)	1set	

No.	Part No.	Part Name	Q'ty	Price
98	TQ06782	Packing Gear Box	1	
99	TQ06766	Ball Bearing 6906ZZ	2	
100	TQ06764	Spur Gear 1x98	1	
101	TQ06765	Parallel Key 8x7x20 Both ends round	1	
102	TQ06763	Clutch B	1	
103	TQ06767	Geared Motor	1	
104	TQ06768	Spur Gear 1x23	1	
105	CP26427	Hex. Socket Set Screw with Cup Point 5x6	1	
106	TQ06769	Gear Box	1	
107	TQ06770	Hex. Socket Head Cap Screw 4x35	8	
108	TP06387	External Retaining Ring GV-16	2	
109	TP12325	Clutch A	1	
110	TP06374	Spring	1	
111	TQ06777	Cover Plate	1	
112	TP14495	P-Cock PT1/8	1	
113	TB01098	Tube 4x7x3000 Ass'y	1set	
114	TQ11062	Rubber Cap	1	
115	TQ06784	Oil Tank	1	
116	TQ06786	Rubber Plug	1	
117	TP04715	Hex. Socket Head Cap Screw 4x8	3	
118	TQ11027	Shim 0.2	1	
119	TQ11075	Cable Connector 3247	1	

Accessories

No.	Part No.	Part Name	Q'ty	Price
-	TP04696	Hex. Socket Screw Key 3	1	
-	TP01939	Hex. Socket Screw Key 4	1	
-	TP17014	Spanner 8x10	1	
-	TJ16019	Pilot Pin 09050	1	
-	TA99027	Chain Ass'y	1set	
-	TB02145	Cutting Oil 0.5L Ass'y	1set	
-	TB05418	Guard Ass'y	1set	
-	TQ11227	Instruction Manual	1	