

8 Exploded View/Parts List


MYS-40 Exploded View/Parts List

⚠ CAUTION

- Users should never perform disassembly of the tool.

This illustration is for reference only.

For repair or replacement of the tool, request service from the retailer where you purchased the tool or the nearest NITTO service member store.

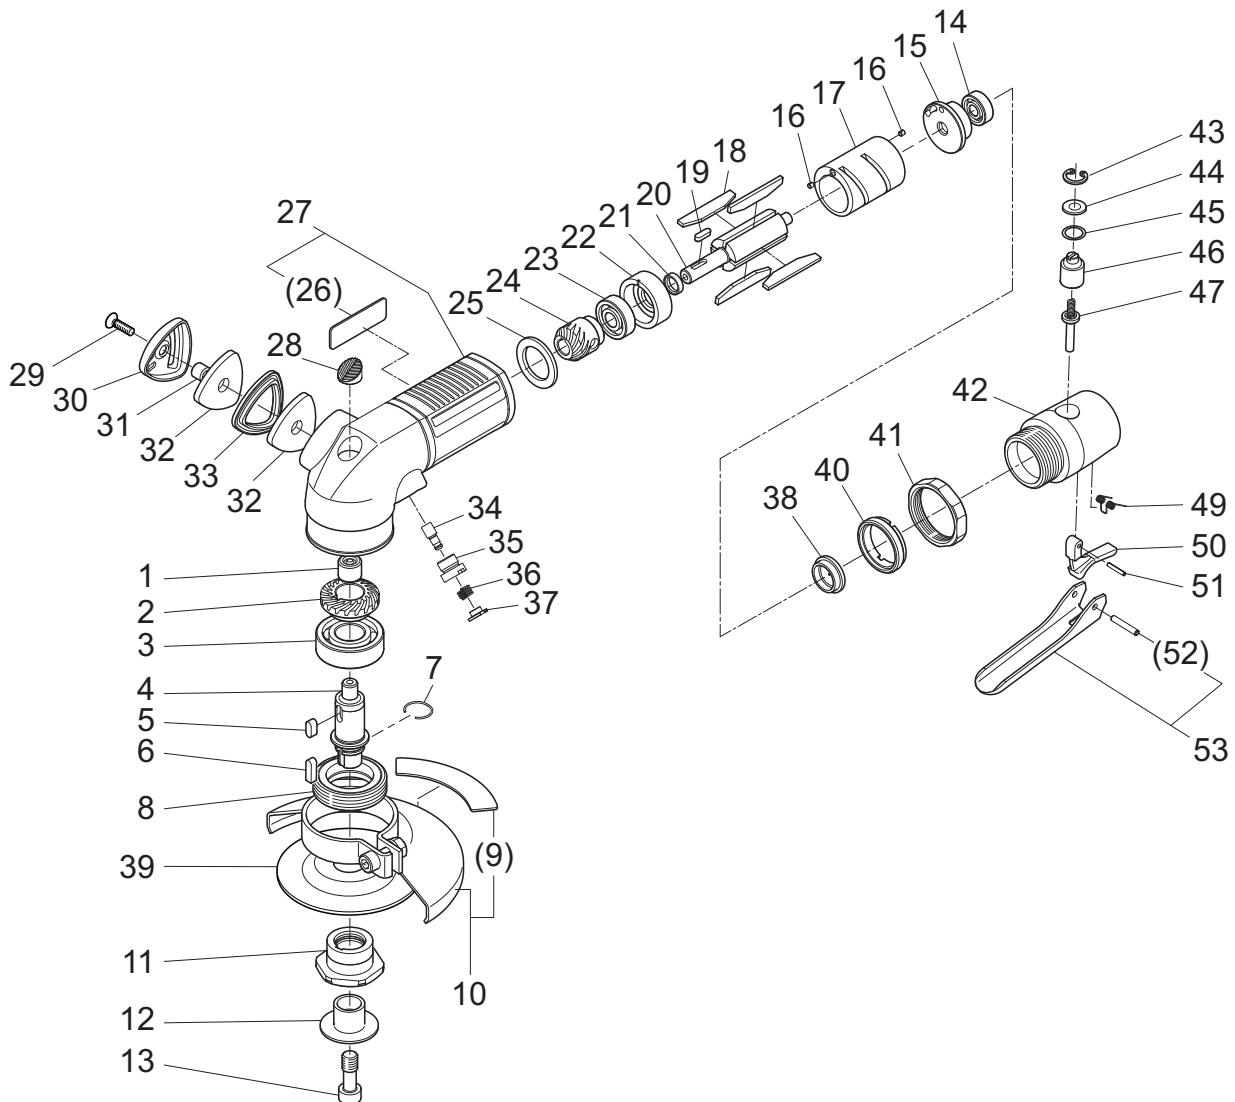

*1 indicates a consumable item, *2 indicates a commercial item. Parts inside () are components of the above assembly.

No.	Part no.	Part name	Quantity
*2	1	TQ00893 Needle Bearing BK0810	1
*1	2	TQ14867 Spiral Bevel Gear 1.25×25	1
*1 *2	3	TP01609 Ball Bearing 6202ZZ	1
	4	TQ14868 Spindle	1
	5	TP00502 Parallel Key 4×4×9.5 Both Ends Round	1
	6	TQ14906 Parallel Key 4×4×13.3 One End Round	1
	7	TQ14977 Stop Ring I-0.8×15.4	1

No.	Part no.	Part name	Quantity
8	TB08883	Bearing Set Screw Ass'y	1 set
10	TB10499	Wheel Guard Ass'y	1 set
(9)	(TQ15325)	Label Warning Wheel Guard	1
11	TQ14885	Driving Flange	1
12	TQ14991	Outer Flange Ø16	1
13	TP09932	Outer Flange Bolt	1
*1 *2	14	TP03933	Ball Bearing 606ZZ
	15	TQ14869	End Plate A
	16	TP00496	Spring Pin 2.5×6 AW
	17	TQ15014	Cylinder
*1	18	TB10330	Blade Ass'y
	19	TP10130	Parallel Key 3×3×10 Both Ends Round
	20	TQ14940	Rotor
	21	TP06322	Spacer 8×11×3
	22	TP14931	End Plate B
*1 *2	23	TP00468	Ball Bearing 608ZZ
*1	24	TQ14873	Spiral Bevel Gear L1.25×13
	25	TP10101	Spacer 19×28×2
	27	TB10425	Housing Sub Ass'y
	(26)	(TQ15291)	Label Warning
	28	TQ15005	Plug 40S
	29	TQ14946	+ Countersunk Head Screw 4×14
	30	TQ14878	Exhaust Cover
	31	TQ14880	Spacer
*1	32	TQ14881	Muffler
	33	TQ14879	Packing Cover
	34	TQ14863	Lock Pin
	35	TQ14865	Pin Guide
	36	TQ14864	Spring 0.6×6.9×8
	37	TQ14866	Lock Button
	38	TP10110	Cap
	39	TP14948	Back-up Pad
	40	TP10098	Lock Nut
	41	TP03468	Lock Ring
	42	TP15211	Valve Main Unit
	43	TP03695	Internal Retaining Ring C-12
	44	TP06326	Spacer 6×12×1.2
	45	TP11997	O-Ring KS-7
	46	TP06325	Adjust Valve
	47	TA99300	Valve Stem Ass'y
	49	TP14340	Torsion Spring
	50	TP14339	Lock Lever
	51	TP09434	Spring Pin 2×12
	53	TA96253	Throttle Lever Ass'y
	(52)	(TP01921)	Spring Pin 3×18

Accessories

No.	Part no.	Part name	Quantity
	TP04004	5 mm Hex. Socket Screw Key	1
	TP00170	6 mm Hex. Socket Screw Key	1
	TP02236	Bushing R 1/4×NPT 1/4	1
	TQ15292	Instruction Manual (this document)	1